


# 4kW Space Heater Control Panel Functions

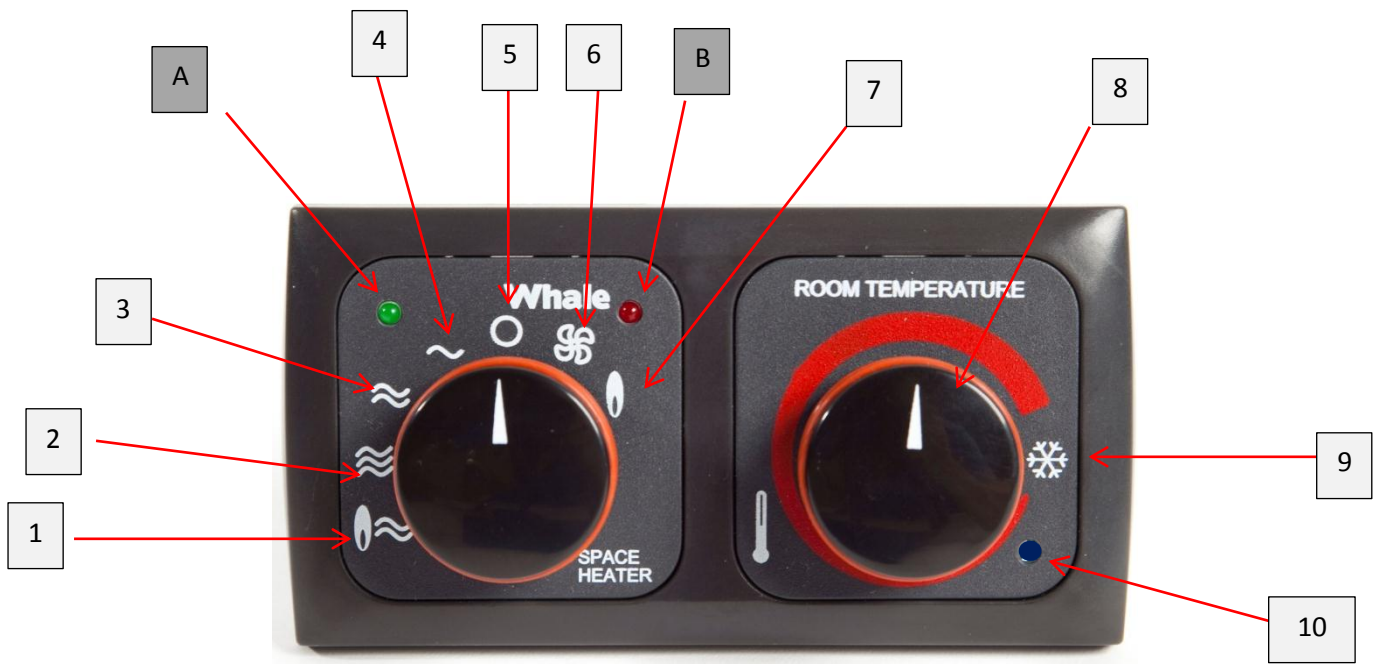

A	Gas Setting	Indicates that the heater is operating on gas
B	Diagnostic Indicator	Will flash if heater has failed to turn on due to a fault, under normal operation this light will remain turned off
1	Heat Boost Setting	Uses gas and electric simultaneously for higher heat outputs. Intelligently balances between gas and electric settings, varying the heat output accordingly to maintain the selected room temperature.
2	2000W	Heat boost electric setting
3	1000W	Intermediate heat electric setting
4	500W	Quiet / night time electric setting
5	Off	Heater off position
6	Fan only	Air circulation setting, no heat output
7	Gas function	Gas only setting
8	Thermostat	Adjusts the heat output level
9	Temperature Sensor	Note – this is not an LED and does not light up
10	Low heat output level	Frost protection setting

|

|

- NOTES:** 1. When operating on gas the green LED will be lit to show that the gas is burning safely.  
2. When operating on electric the fan will be running and heat generated, but no LED's will be lit.