



Gas and Electric Space Heaters

The Discreet Heating System

- Internal or underfloor installation
- Gas only or gas & electric models
- Simple and intuitive to use
- Electronic temperature control
- Frost protection setting
- Quiet night time setting
- Energy efficient design
- Lightweight units
- No internal flue or chimney required

Internal



SH2201
SH2202

Underfloor



SH2211B
SH2212B



Space Heater Fault Finding

No. of flashes	Fault	Remedy
1	No flame detected	Check gas supply.
2	Overheat	Check the air ducts and vents are not blocked or restricted. We recommend you wait at least 5 to 10 minutes to allow the heater to cool before clearing lockout.
3	Low/High Supply Voltage	Ensure voltage is above 10V at the heater.
4	Combustion Air Fault	Check combustion air flue and exhaust flue for blockages.
5	Other/internal fault	Attempt to clear lockout as shown below. If this fails contact Heater Support: 0845 217 2933.

To clear any lockout switch off and back on within 2.5 seconds