



The **INSTANT MATCH**® WIRELESS transformer must be registered with the Mira Advance Extra WIRELESS Shower to establish a reliable connection.



- Move the jumper on the Whale **INSTANT MATCH**® transformer to the **Mira Advance Extra WIRELESS** setting.
- Check that the jumper in the **Mira Advance Extra WIRELESS** Shower (rear of front cover) is on the **WIRELESS** setting.
- Ensure the transformer is mounted vertically.
- Do not mount the transformer behind foil backed board or insulation.



1. Turn mains electric power supply to the shower **OFF**.




2. Set the shower temperature to **FULL COLD**.



3. Switch mains electric power to the **INSTANT MATCH**® transformer **ON** Indicated by a flashing **GREEN** then **RED** light on the transformer **TEST BUTTON**.



4. Turn mains electric power supply to the shower **ON**. This illuminates the **BLUE** light on the shower **START - STOP** button.

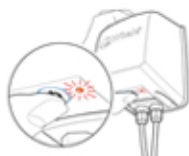

5. **IMPORTANT** Within 30 seconds press and hold the transformer **TEST BUTTON**

After a delay of up to 15 seconds the shower will give a long audible bleep and the transformer **LED** will begin to flash **GREEN** on button release.

This indicates successful registration.

6. Turn shower off and begin commissioning the shower as normal. If you have any difficulties refer to the trouble shooting guide.



Scan QR code for  
Registration video

Contact us