

INSTANT MATCH

Quick Reference Guide -
Read before installing



You Tube For Electric Showers

www.youtube.com/WhaleHealthcare

Maximum pipe length 3m - extra elbows will reduce performance.


Pipe from gully to pump must be 15mm. (Do not use 22mm pipework for electric showers. This will increase gully noise.)




Horizontal to waste pipe
To increase pump life ensure that 1¼" or 1½" pipe is used with a gravity fall where the pipe length is greater than 1m. If less than 1m use 22mm pipe.

Tips

Rotate pump head to simplify pipe run to gully. Ensure clamp ring is retightened.

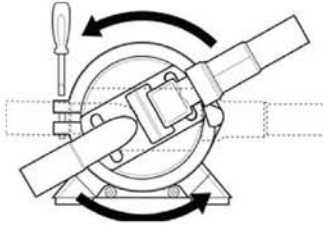

Cover gully drain opening during installation of wetroom. Clear any debris before operating pump.

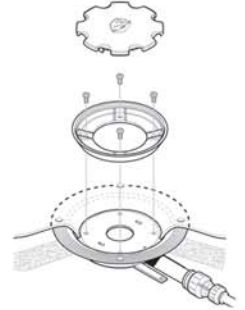

! All electrical components must be left accessible

INSTANT MATCH



Quick Reference Guide - Read before installing




You Tube For Electric Showers

www.youtube.com/WhaleHealthcare

Pipework


Ensure clean right angle cut of pipe. No burrs. Cut pipe on V mark indicated.

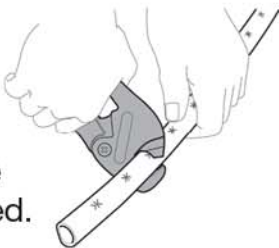

Spray inside fitting and pipe with pipe manufacturer's silicone lubricant.



Push fitting fully home. Twist lock in place to secure.

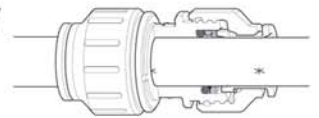


Fittings

Do not use stem elbows or inserts as these restrict flow.




Use manufactured formed bends or full bore elbows.

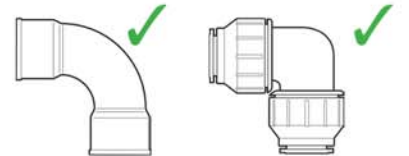


Tips

Use anti-syphon trap on basin if connecting into sink waste pipe.

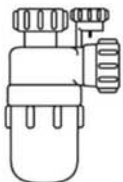

If used in conjunction with a macerator pump suitable for the type of installation, feed pump discharge into top of macerator.

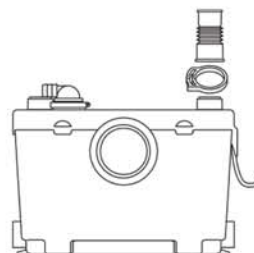

For hardwired connections to the Mira Advanced Flex Extra, Triton Safeguard+ and Redring S electronic 'WP' showers, please see the 'Instant Match' Quick Guide.

! All electrical components must be left accessible