

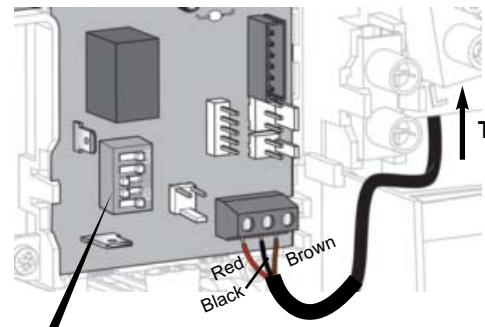


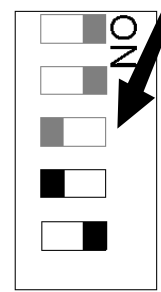


Triton Safeguard + Omnicare Design, Omnicare Style, T150Z+ - Wired Connections to the Instant Match Transformer

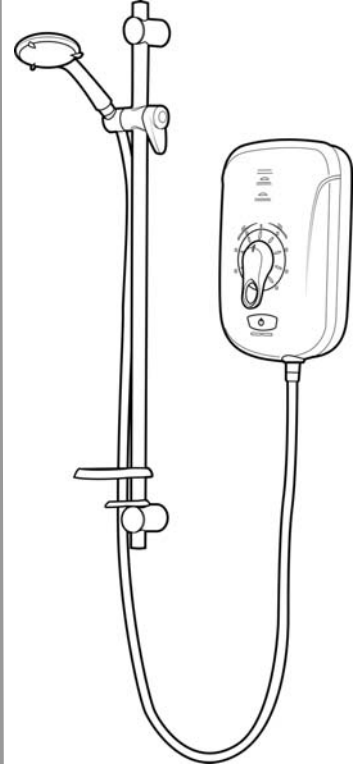



Transformer

Whale Transformer Settings

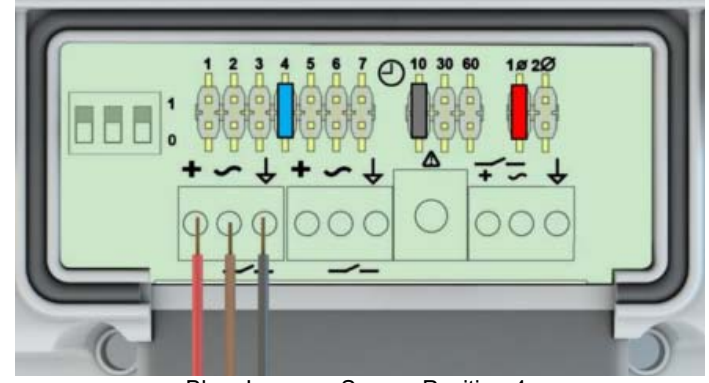


Blue Jumper - Sensor Position 4
 Grey Jumper - Over run 10 Seconds
 Red Jumper - Pipe inlet 15mm

Redring Selectronic WP (SEL85WP or SEL95WP) - Wired Connections to the Instant Match Transformer

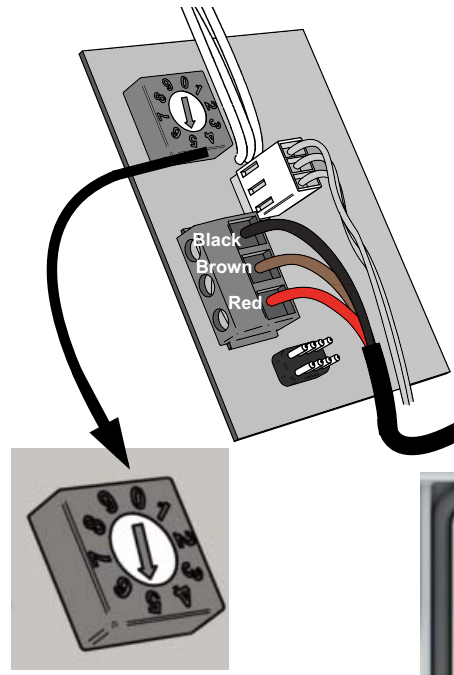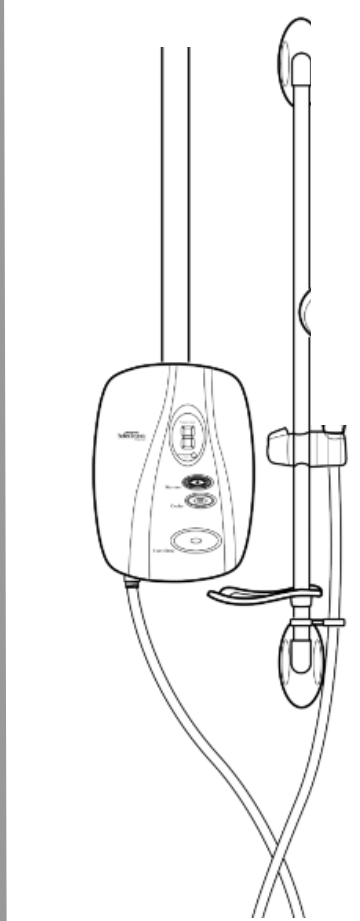

Transformer

Whale Transformer Settings


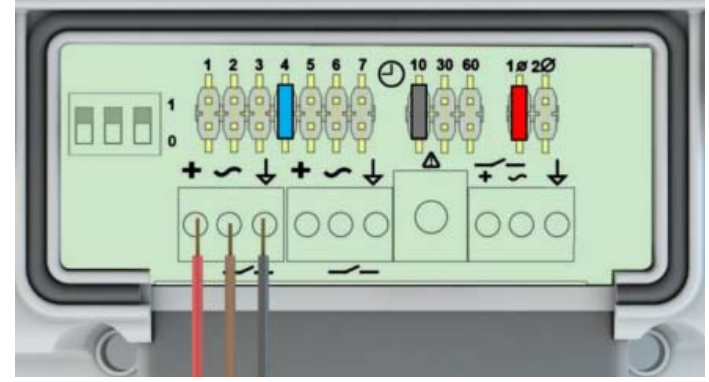


Blue Jumper - Sensor Position 4
 Grey Jumper - Over run 10 Seconds
 Red Jumper - Pipe inlet 15mm

For INSTANT MATCH WIRELESS connections to the Mira Advance Extra Wireless, please see Registration Guide.


Mira Advance Extra 1.1785.005 (J09N) - Wired Connections to the INSTANT MATCH Transformer

Flex Extra J09N

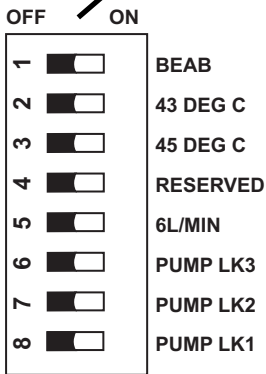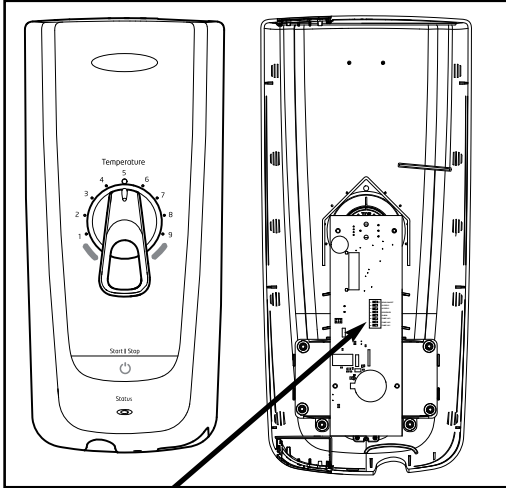


Ensure LK1 is set to 'OFF' for Hardwired connection

Connection to Mira Advance J09N Shower

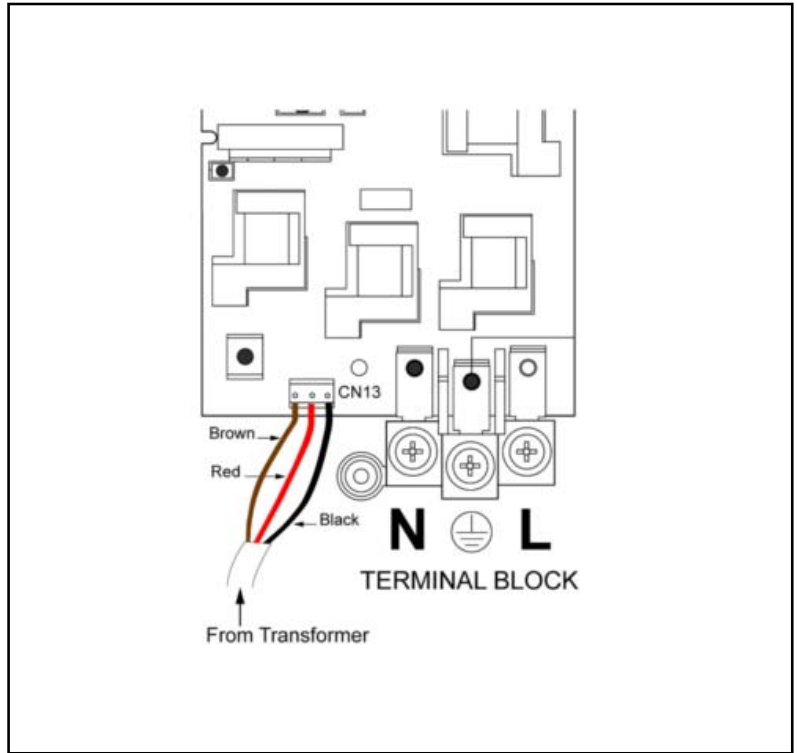

Whale Transformer Settings

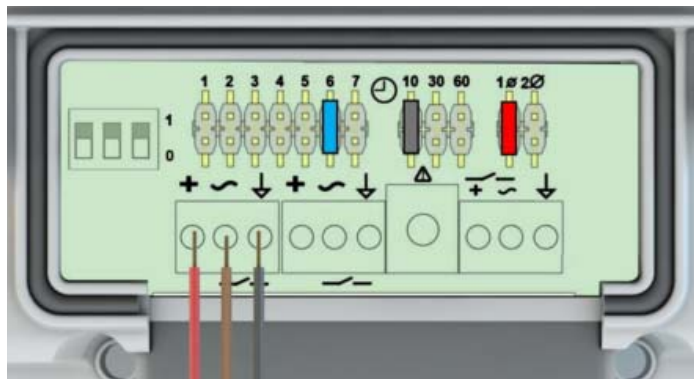

- Blue Jumper - Sensor Position 6
- Grey Jumper - Over run 10 Seconds
- Red Jumper - Pipe inlet 15mm

Connection to other Electric Showers

Where fitting the Instant Match to an electric shower without a digital pump connection a flow sensor is needed in the water supply to the shower. Please refer to our web page (www.whalepumps.com/psd) and go to the Resources section for Level access adaptations for instructions or call the Whale Shower Drainage Helpline.

Contact us

Whale, 2 Enterprise Road, Bangor
Co. Down, BT19 7TA, N. Ireland

whalepumps.com / drainagesupport@whalepumps.com

Contact the Technical Helpline
if you need further assistance

0845 0694 253

©Copyright Whale 2017 - All rights reserved. Reproduction in whole or in part without permission is prohibited. WHALE® and WHALE INSTANT MATCH® are registered trademarks of Munster Simms Engineering Limited, Bangor, Northern Ireland trading as Whale. Whale's policy is one of continuous improvement and we reserve the right to change specifications without prior notice. Illustrations are for guidance purposes only. Neither the accuracy nor completeness of the information contained in this or any Product literature is guaranteed by the Company and may be subject to change at its sole discretion. Please note that by contacting Whale Support you will be indicating your consent to receiving product updates, recall information, help guides and appropriate marketing messages from us via post, email or telephone unless you indicated an objection to receiving such messages.